



X-Head

Cylinder Head Guards

Installation Guide


IMPORTANT NOTE:

Do Not Use Loctite™ on bolts securing the cylinder head guards. Contact with the material may lead to chemically induced weakening and cracking of the mounting tabs.


Parts: Left & Right Guards
4 Aluminum Spacers
2 16mm M6 Hex Bolts
4 10mm M6 Hex Bolts
4 Washers

Fits: R1200 R
R1200 S
R1200 GS
R1200 RT
R1200 ST

1. Remove existing fasteners or plastic plugs.

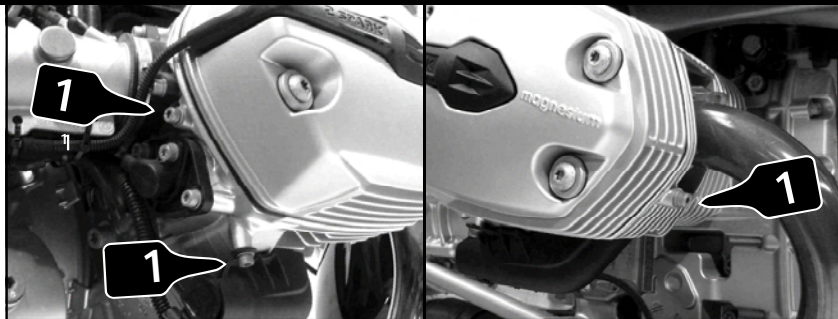

2. Screw in aluminum spacers by hand and lightly snug down with a 13mm wrench. **DO NOT OVERTIGHTEN.** Overtightening may cause the shank of the spacer to break.

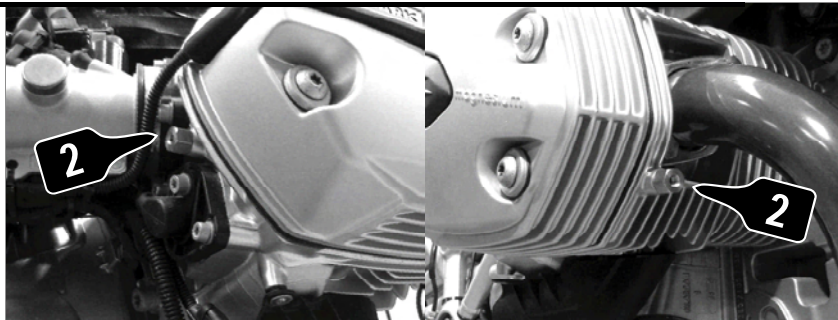

3. Insert bottom tab of the X-head tab between lower spark plug cover and cylinder head. Install the 16mm M6 hex bolt (washer is not needed) and secure tab with 5mm hex wrench.

4. Install 10mm M6 hex bolts with washers and secure the front and rear tabs with a 5mm hex wrench.



Care Instructions: Clean with mild soap and water. **DO NOT USE petroleum products** like WD-40 or chemical cleaners. Avoid contact with oil and gasoline.